

Technical information for spring hinges

Opening direction of spring hinges acc. to spring type:

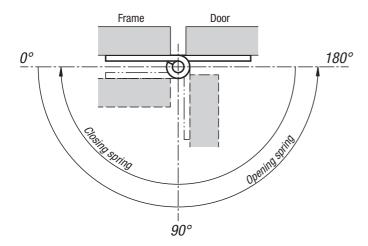

Spring hinge torque developement acc. to angular position:

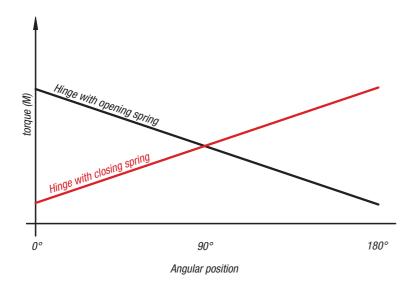

M: Hinge torque in various positions.

M(0°): Torque by parallel positioned doors.

 
M(90°) Torque by doors positioned at 90°

M(180°): Torque by doors positioned at 180°.




Technical information for spring hinges

Hinges with closing spring




Hinges with opening spring

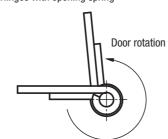



Mounting and opening direction:


Surface mounted:

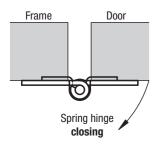

Recessed mounting:

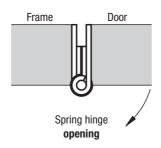

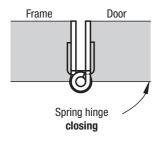

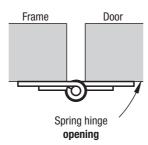

The arrow shows the hinge rotation direction under influence of the spring.

