

Item description/product images



Description

Material:


Plastic

Note:


Intermediate plates are used for mounting shaft collars and radial shaft seals.

Drawings



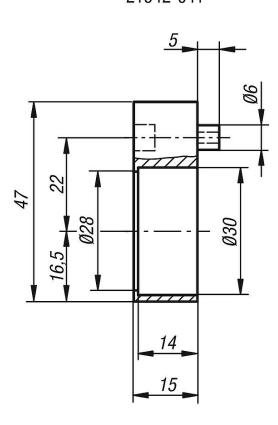

21942-091

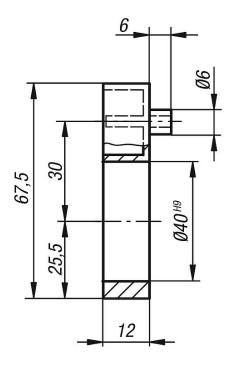

Overview of items

Order No.	Suitable
	for position
	indicator
21942-041	21902, 21923
21942-091	21904, 21922

© norelem www.norelem.com 1/2

21942 Intermediate plates



Overview of items

© norelem www.norelem.com 2/2