




安装说明 06894

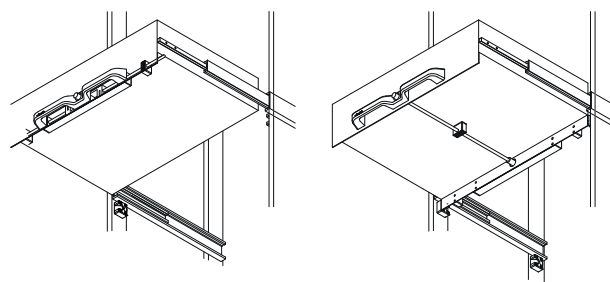


06894-060
06894-120

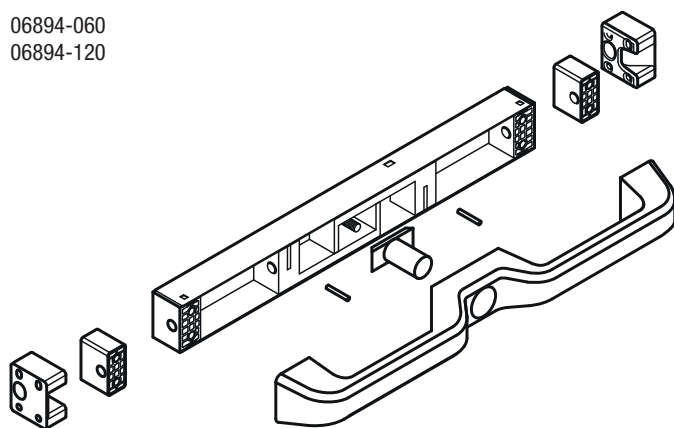

06894-91

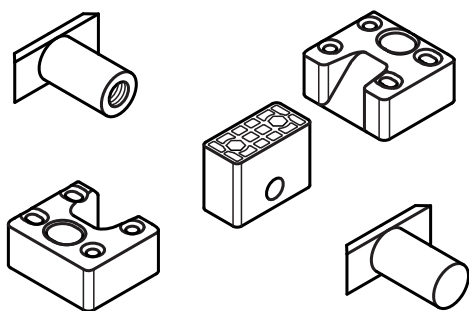


06894-900500
06894-900750
06894-910500
06894-910750

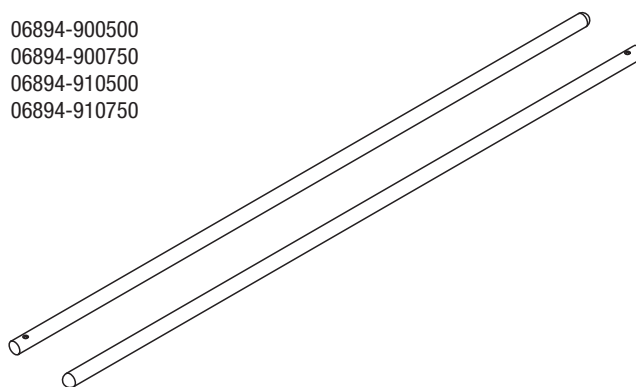


06894-060 + 06894-900500 或 06894-910500

06894-120 + 06894-900750 或 06894-910750

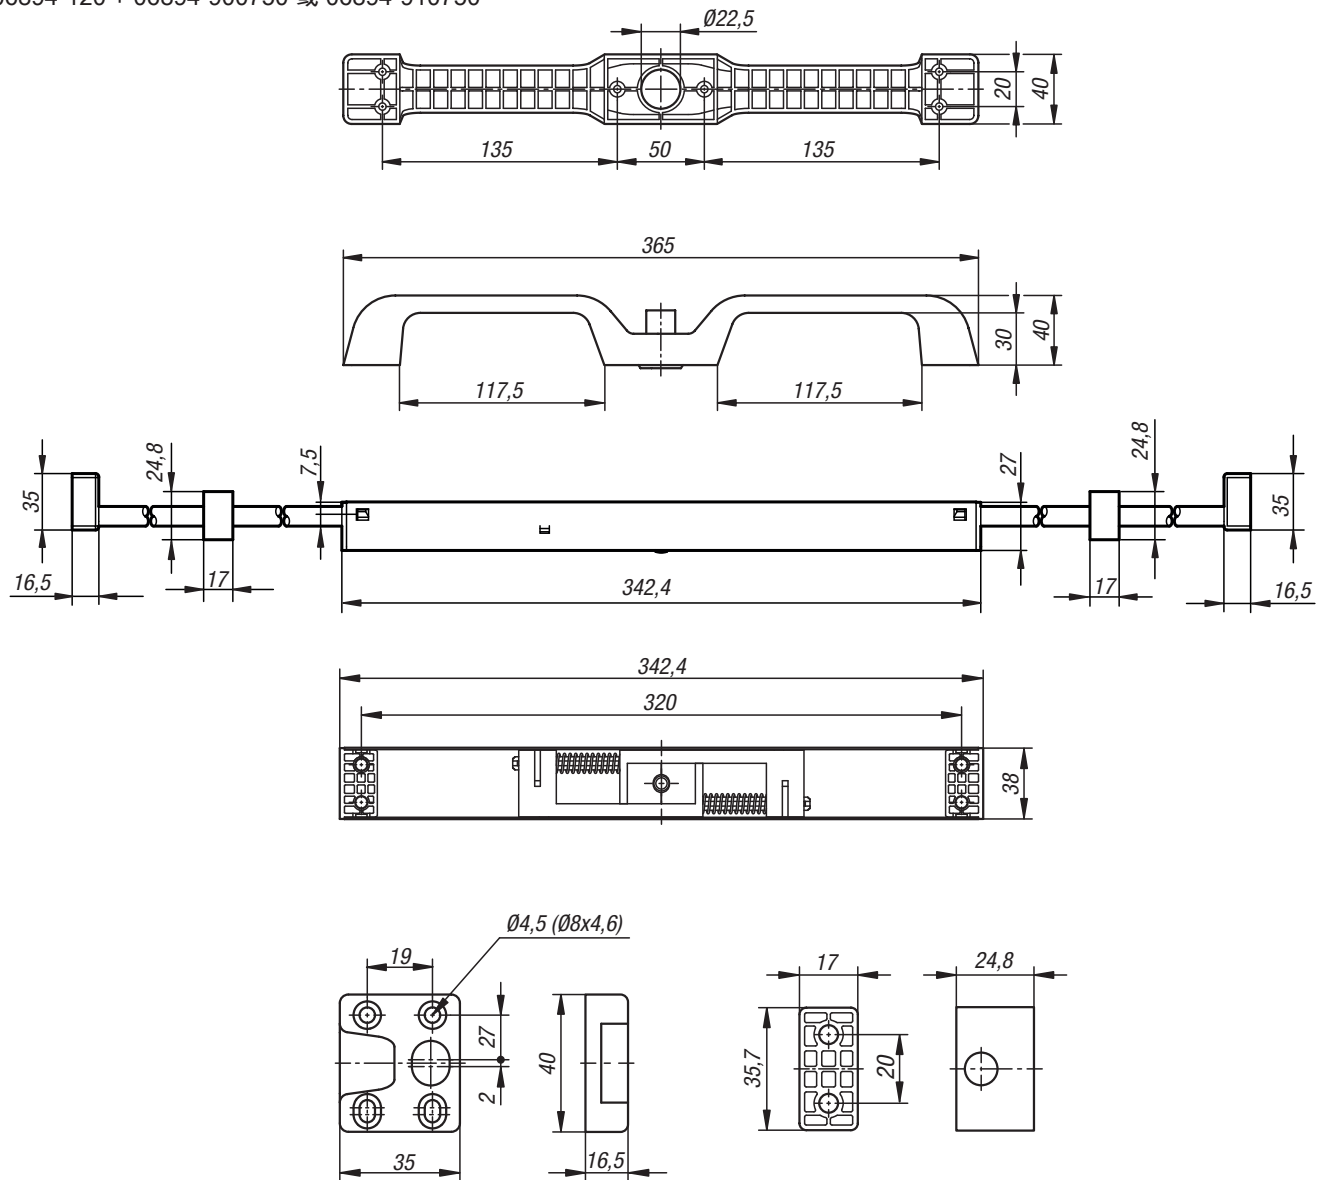


06894-060 + 06894-900500
 或 06894-910500 + 06894-91
 06894-120 + 06894-900750
 或 06894-910750


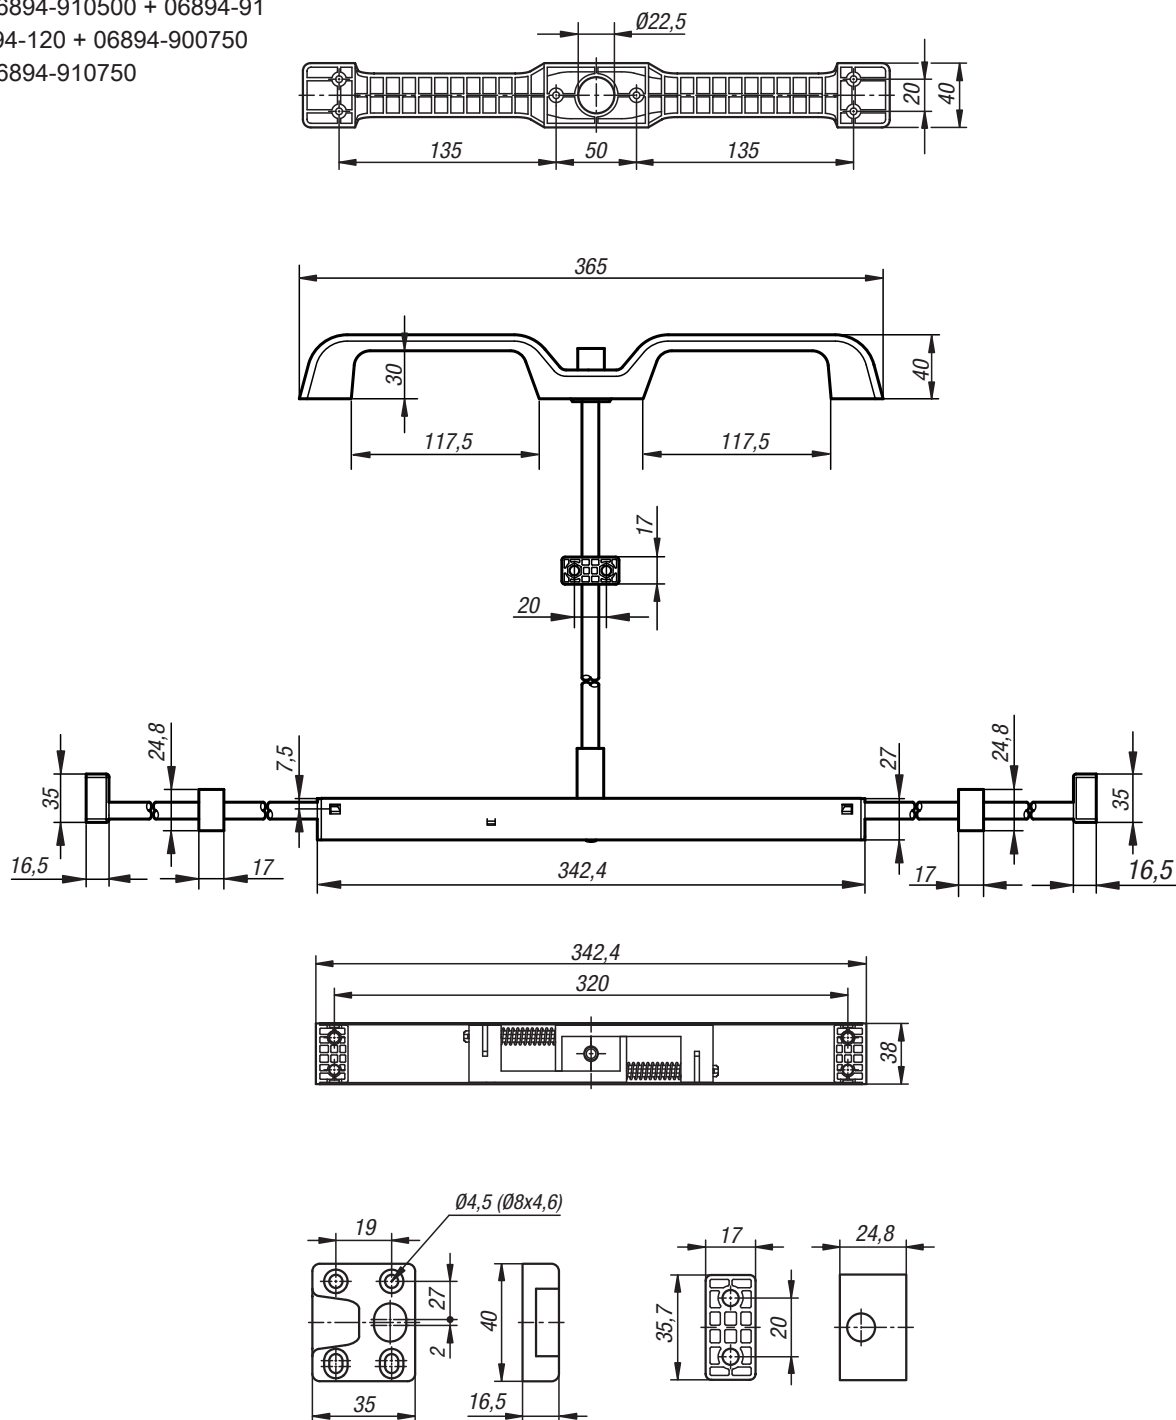




固定和锁定



锁紧装置在开启位置不能用于过度延伸导轨（超过 100% 延伸）。

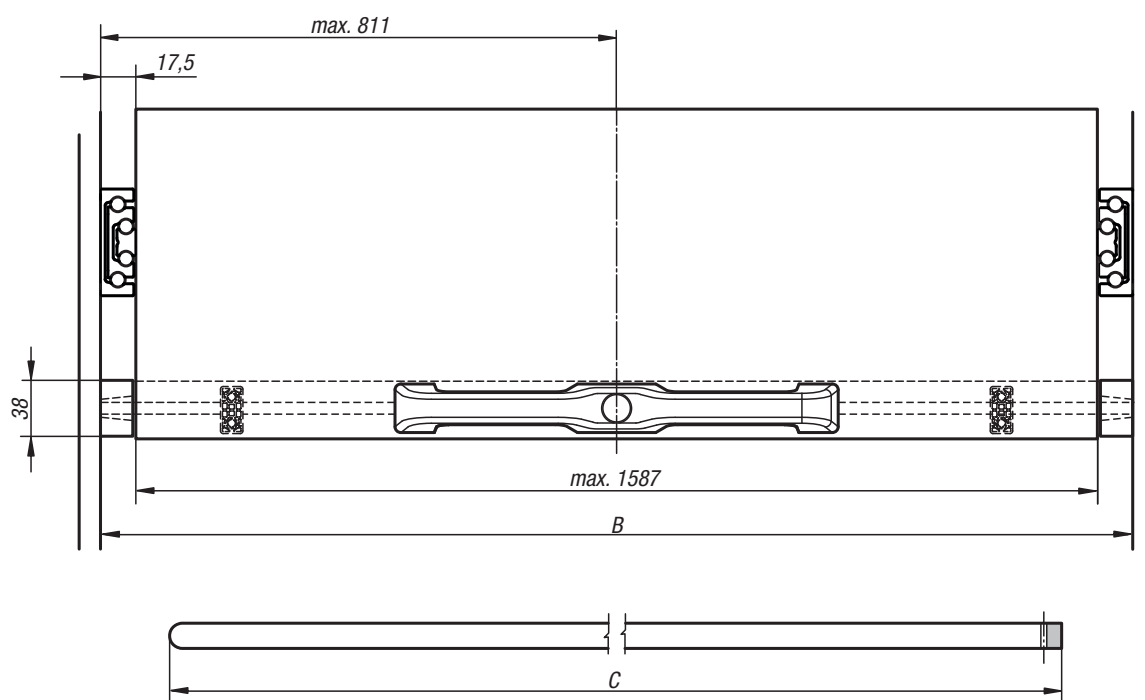


 $C = (B - 122,3) / 2$
 $C < 500$
 $C > 500$

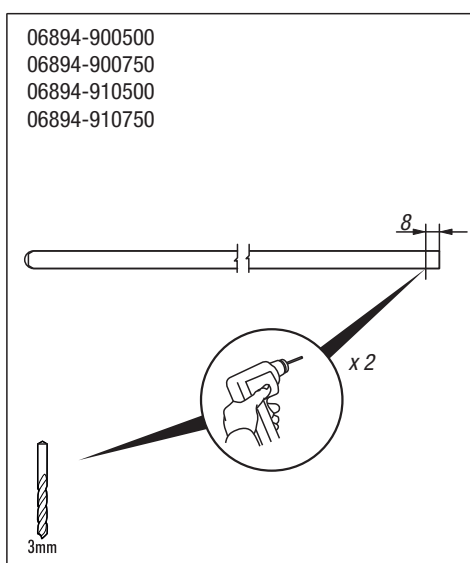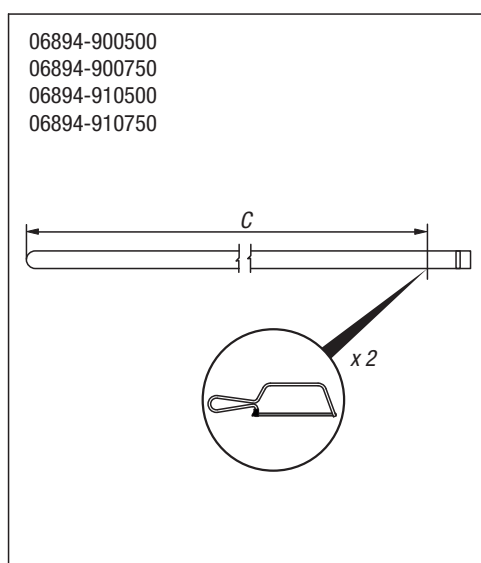

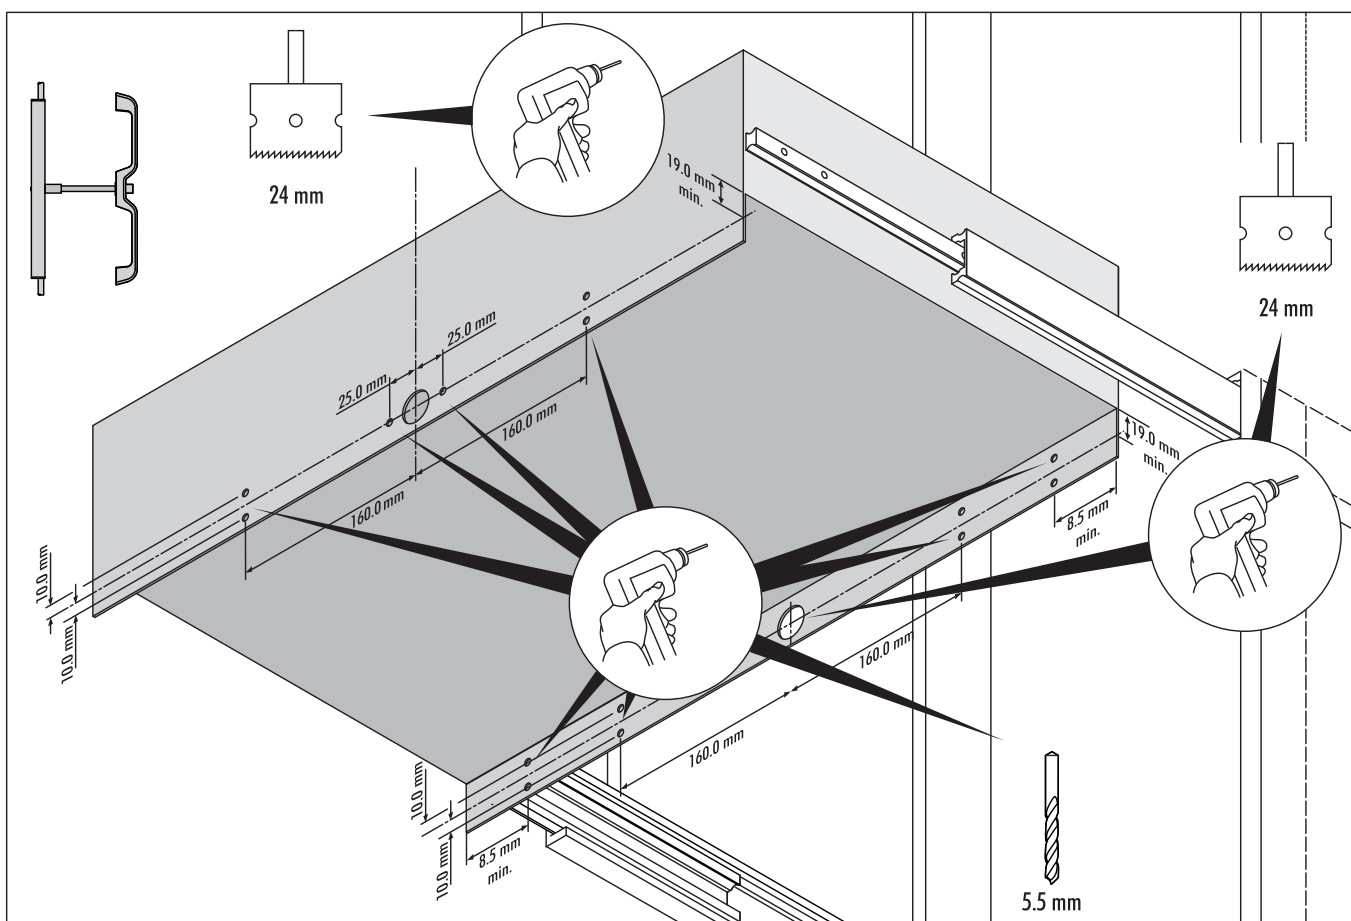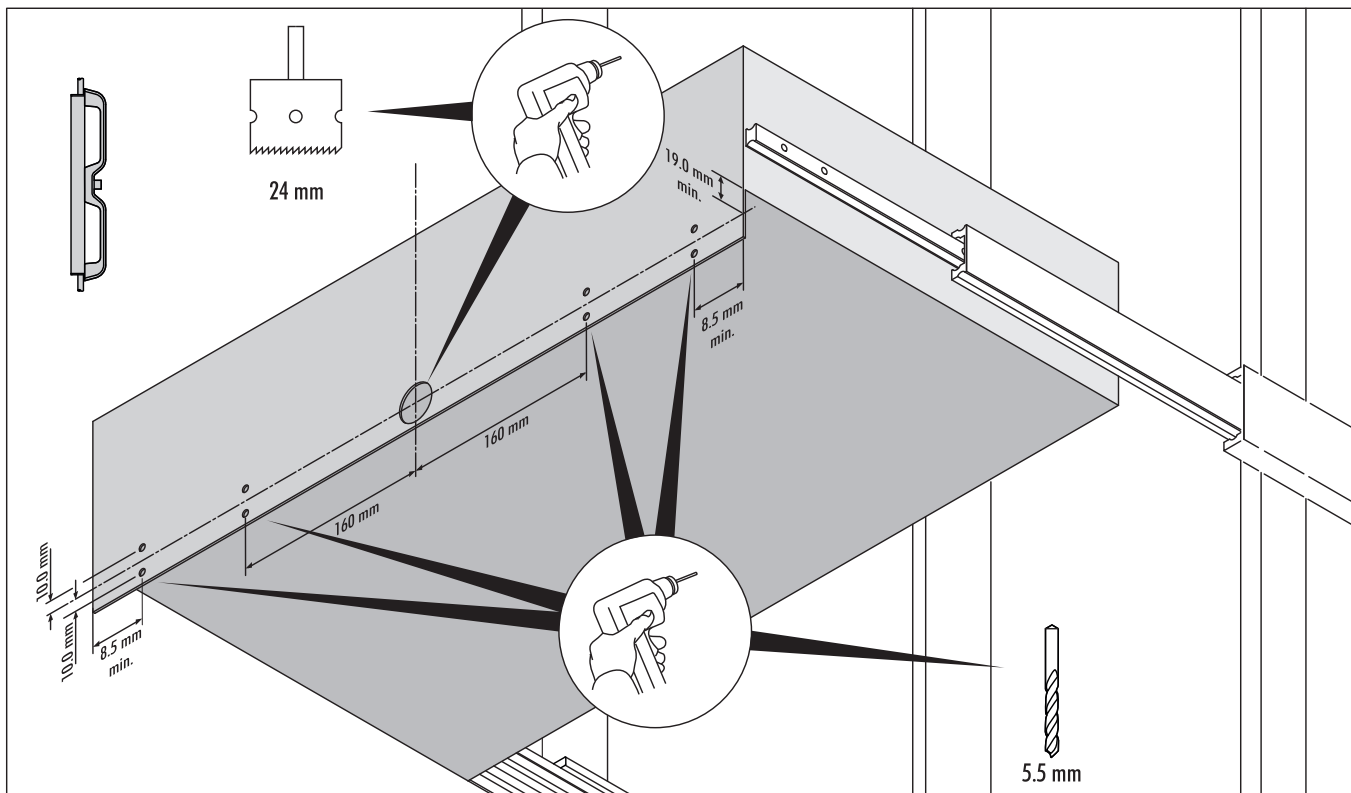

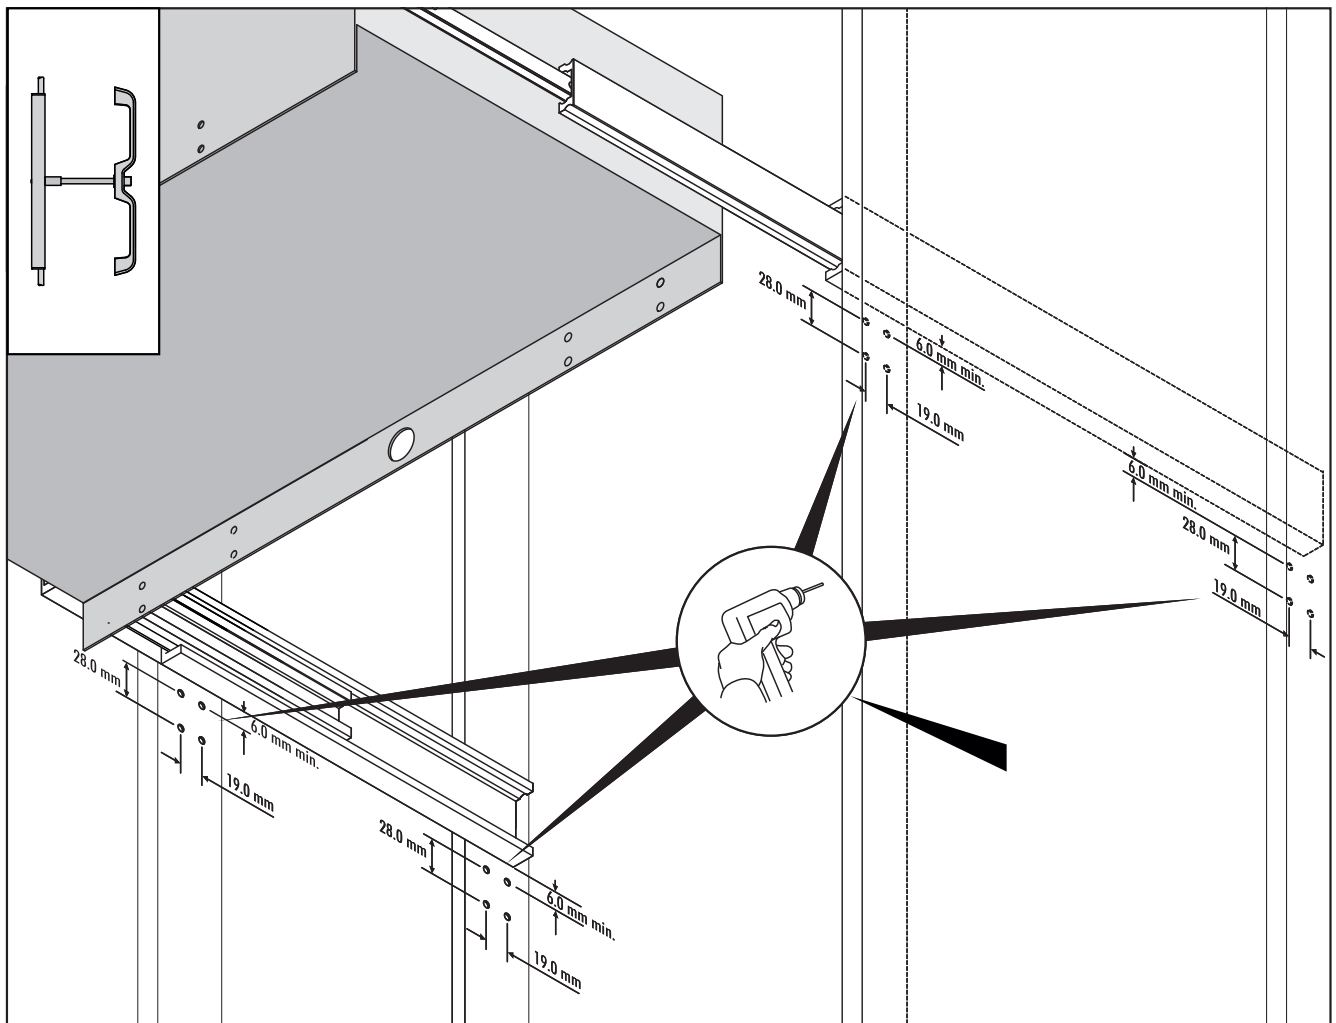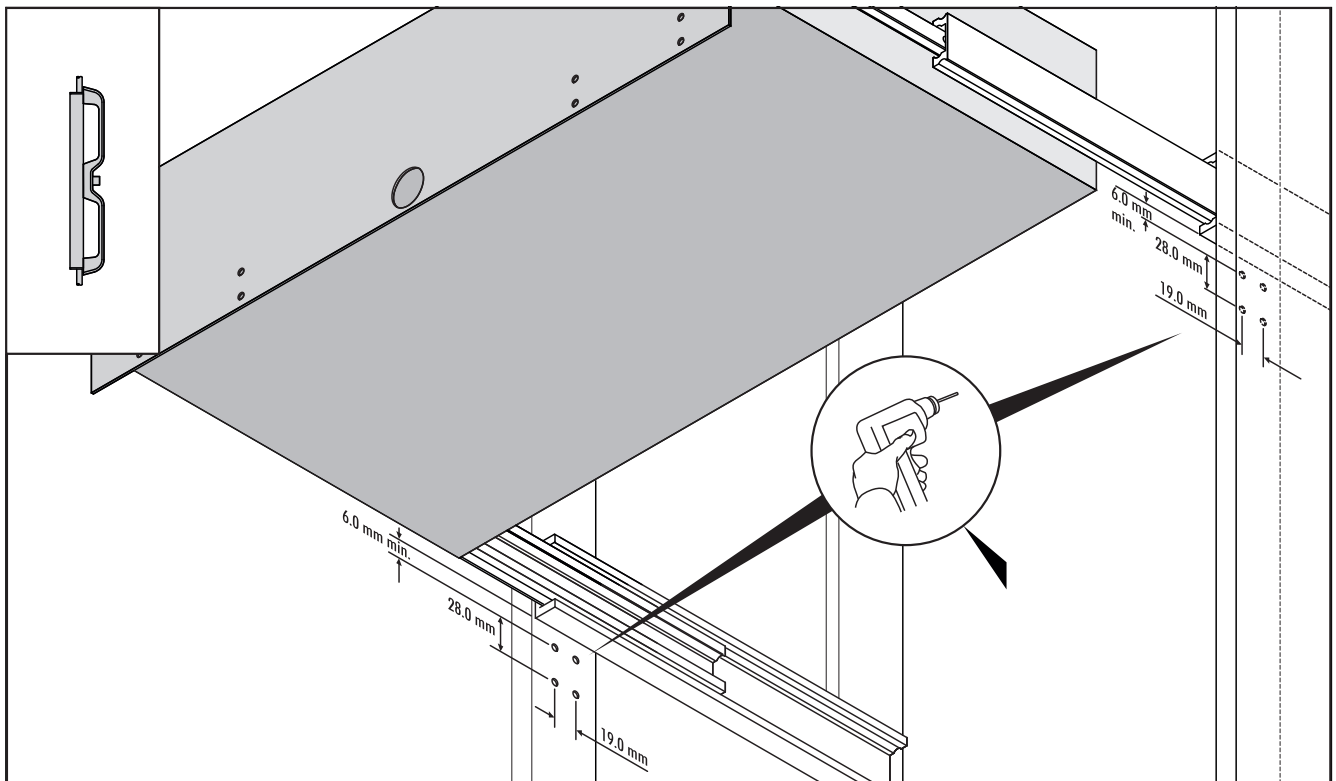

根据情况进行钻孔和紧固

