

Item description/product images



Description

Material:

Body and jaw steel. Limit stop aluminium.

Version:

Body black oxidised.

Jaws nitrocarburised and black oxidised.

Limit stop black anodised.

Note:

The floating clamp is used to clamp and support overhanging clamping points on components. It prevents vibrations and deflection during machining.

Type of operation:

- 1. Push the floating clamp down.
- 2. Pivot the jaws up to the stop. Now the floating jaw of the floating clamp should rest against the underside of the workpiece.
- 3. Tighten the floating clamp with the hex nut (observe the min. and max. tightening torque). During clamping, the workpiece is clamped and simultaneously supported.
- 4. To release, perform the procedure in reverse order.

Assembly:

Set the height range and the pivot range, then attach the floating clamp to the bracket using the holes (D1).


When setting the height, a generous allowance above should be taken into account. Form B:

For special clamping applications, the standard clamping jaw can be modified or replaced.

Drawing reference:

- 1) Exchangeable jaw
- 2) M6 ISO 4762 cap screw
- 3) Fastening point for clamping jaw

Drawings

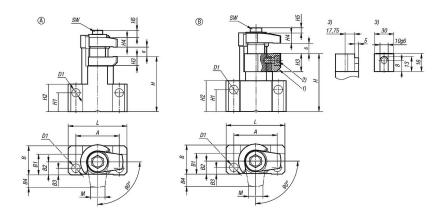

Overview of items

Order No.	Form	Form definition	А	В	B1	B2	В3	B4	D	D1	Н	Н	H1	H2	НЗ	H4	H5	Travel
									for screw									
04423-060808	Α	with status sensor	48	31	22,5	14	7,5	8,5	M6	8,4	60	68	21	30	10	10	7	8

© norelem www.norelem.com

04423 Floating clamps, steel



Overview of items

Order No.	Form	Form definition	A	В	B1	B2	B3	B4	D	D1	Н	Н	H1	H2	Н3	H4	H5	Travel
									for screw									
04423-081012	Λ	with status sonsor	FF	20. 5	00	10 F	a	0.5	140	10.5	70	00	0.4	0.5	44.5	10	0.0	10
044234001012	A	with status sensor	55	36,5	26	16,5	9	8,5	M8	10,5	70	80	24	35	11,5	12	9,3	12

Order No.	Form	Form definition	L	M	max. clamping travel	Min. Tightening torque	Max. tightening torque	Clamping force N	SW	Load capacity N
04423-060808	Α	with status sensor	64	14,6	8	threaded rod	10	3000	10	3000
04423-081012	Α	with status sensor	75	17,3	12	with status sensor, hardwired	20	5000	13	5000
04423-101015	В	with star grip	88	21,6	15	Tension relief	30	8000	17	8000

© norelem www.norelem.com 2/2