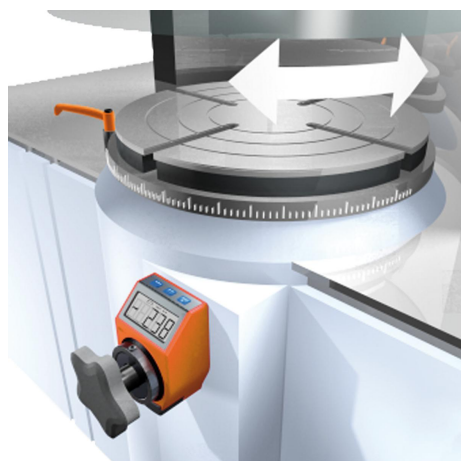


Item description/product images

**Description****Material:**

Housing plastic.
Hollow shaft steel.
Screen LCD display.
Grub screw steel.

Version:

Hollow shaft black oxidised.
Grub screw black.

Note:

The electronic position indicators offer diverse opportunities compared to mechanical position indicators because they display angles as well as uncommon spindle pitches and record each fraction of spindle movement.

* Freely programmable parameters using the programming software 21922-09.

Technical data:

- LCD Display with 5 digits
- Digit size approx. 11.5 mm
- Display range from -19999 ... 99999
- Tunnular shaft Ø 30 H7 mm
- Operating temperature -10 °C to +60 °C
- Storage temperature -30 °C to +80 °C
- Revolution max. 600 rpm
- Lithium battery Button cell 3V, type CR 2032. service life approx. 2 years
- Vibration-resistance according to DIN IEC 68-2-6 10 g / (5 ... 150 Hz), 20 g / (100 ... 2000 Hz)
- Shock-resistance according to DIN IEC 68-2-27 30 g / 15 ms
- EMC DIN EN 61000-4-2; DIN EN 61000-4-4
- Type of protection IP 51


Features:

- indicated value and decimal point freely programmable
- linear or angle mode
- function key for zero-point position
- function key for switching between the absolute dimension and chain dimension
- programming of an offset value directly at the device
- easy battery change


Accessory:

- reducing bushes 21940
- programming software 21922-09

Item description/product images

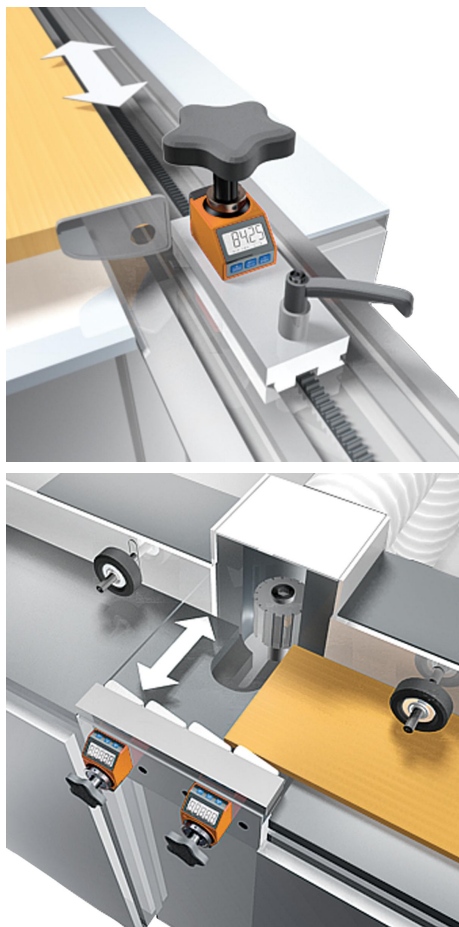

Drawings

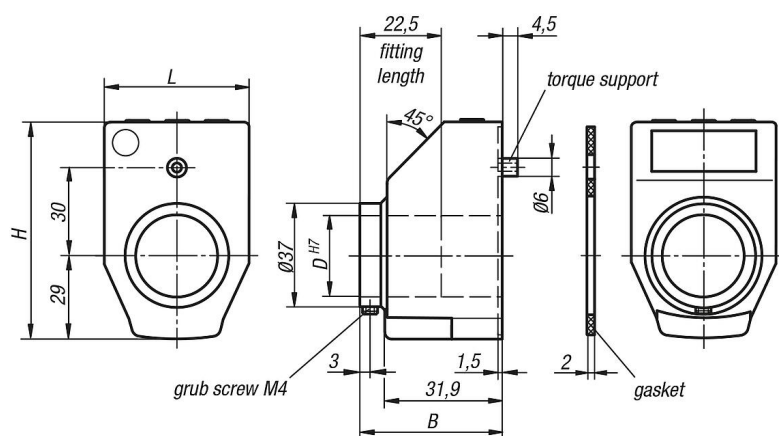

Drawings

Order code:

21922-

Indicator after
one rotation:

e.g.
21922-0200021120
Please indicate here which
value is to be displayed
after one rotation (this is
usually the spindle pitch).

Important:

Please note the decimal
point position!

**Angle mode:**

(resolution 0.1°)

If you want the display to
be in angle mode, enter
03600.

The display in angle mode
is 03600 after one rotation
and returns to 00000 for
the next rotation.

Decimal point position:

e.g.
21922-0200021120
Please indicate here how
many decimal places you
require.

0 = 00000
1 = 0000.0
2 = 000.00
3 = 00.000

**Angle mode:**

If you want the display to
be in angle mode, the
decimal point is best put in
position 1.

This means the display
shows the value 0360.0
after one rotation.


Assembly position:

e.g.
21922-0200021120
1 = Mounting position for
horizontal spindle
3 = Mounting position for
vertical spindle



Count direction:

e.g.
21922-0200021120
1 = clockwise
(ascending values)
2 = anticlockwise
(ascending values)

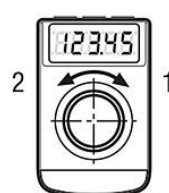

Colour:

e.g.
21922-0200021120
1 = orange
2 = black



Zero-point position:

e.g.
21922-0200021120
0 = directly
5 = delayed by 5 sec.



The Zero-point position
can be delayed by 5 sec.
by means of a parameter,
in order to avoid accidental
zero setting.

Overview of items

Position indicators programmed

Order No.	Version 1	Version 2	B	D	H	L
21922-	digital	programmed	38,8	30	71	48

Position indicators not programmed*

Order No.	Assembly position	Main colour	Version 2	Order No. software
21922-11	1	orange	freely programmable	21922-09
21922-12	1	black	freely programmable	21922-09
21922-31	3	orange	freely programmable	21922-09
21922-32	3	black	freely programmable	21922-09